





## Hanging Rail and Brackets for the GC680 Upper Cupboard

### Installation instructions

#### Introduction

This pair of brackets and hanging rail have been specifically designed to be installed without the need for any permanent alterations to your VW Grand California, the process should take approximately 10 minutes from start to finish.

#### Components

ID	Part	Description	QTY
A	Hanging Brackets		2
B	White hanging rail and end caps 290mm x 19mm		1
C	TX 20 screws 4.2mm x 16mm		4
D	TX 20 key		1

#### Installation steps

1. Use the supplied TX Key (D) to unscrew 2 screws on each side of the wardrobe which are closest to the back of the wardrobe. These are identified with red arrows on Figure 1 below.
2. Slide the hanging brackets (A) onto the hanging rail (B) as shown in Figure 2.
3. Use the supplied screws (C) and TX key (D) to fit the brackets to the screw holes revealed in step 1. The supplied screws are intentionally larger than the ones removed in step 1 to accommodate the thickness of the hanging bracket. Once complete the hanging bracket and rail should look like the one shown in Figure 3.

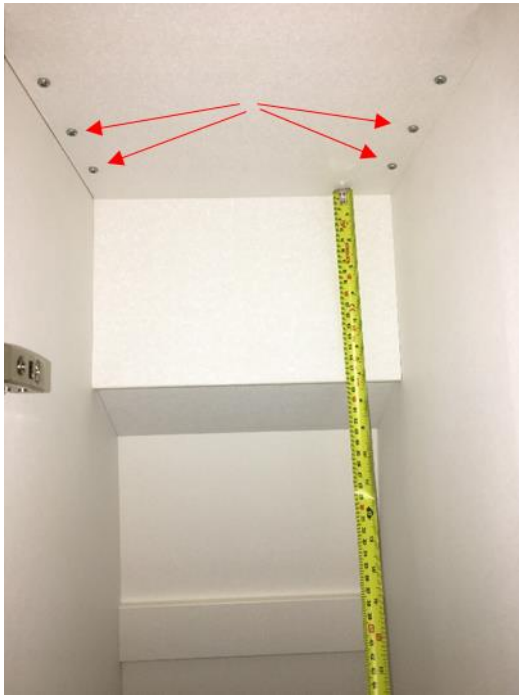


Figure 1. Arrows show 4 TX screws to be removed.



Figure 2. Ready for installation



Figure 3. Completed installation.

**Installation complete.**

We hope you enjoy your new hanging rail for a long time. If you encounter any difficulties, please do not hesitate to contact us for advice and support:

On our web page: [www.yescampervan.co.uk](http://www.yescampervan.co.uk)

E-mail: [Joe@yescampervan.co.uk](mailto:Joe@yescampervan.co.uk)

On Facebook: <https://www.facebook.com/Yes-Campervan-106344454480912>