


SpaceMate T7 V3 Installation Guide

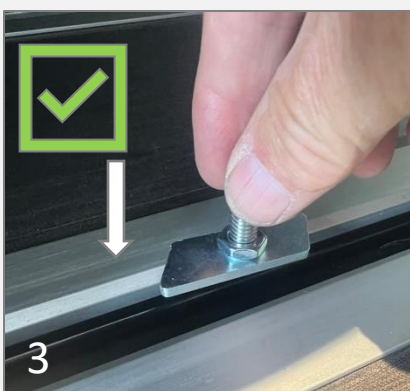

Step 1: Rear Seat Setup

Begin by moving the two rear seats into the furthest forward position to give you access behind them.

Step 2: Positioning the SpaceMate

Slide your SpaceMate T7 V3 into place from the rear boot space until the front edge of the drawer is level with the edge of the protective boot strip. Using the latch, open the drawer by approximately 50 mm (2").

Important: ⚠

Do not allow the drawer to open too far before it is safely fitted!

Step 3: Rail Fitting Installation

Place both of your rail fittings into the VW rail slots.

Ensure the fitting is oriented as in **fig 2**, then and rotate clockwise to secure in place. Slide the fittings towards the SpaceMate's subframe. They should now rest in a vertical position.





SpaceMate T7 V3 Installation Guide

Step 4: Lifting the SpaceMate into Position

While lifting the SpaceMate frame over the fittings, use your free hand to steady each fitting and guide it through the frame slots until it drops into place.

Tip: Gently pull on the bolt and use your fingers to hold it in position. Return to the rear of your Cali to ensure the SpaceMate remains aligned and that the side clearances are satisfactory.

Step 5: Final Tightening

Fit the nylon washer and firmly tighten using the provided wing nut.

Step 6: Seat Adjustment

Slide the rear seats back into position. Your SpaceMate is now correctly installed and ready for use. Have fun and enjoy the practicality of your new SpaceMate!


Gas Bottle & Tool Access

To access the gas bottle:

1. Move the rear seats to the forward position.
2. Loosen (but do not remove) the wing nuts.
3. Slide the SpaceMate fully forward (even when full) to allow easy access to the gas or tool compartments for changing.

Note:

The blue tape is there to protect your SpaceMate during shipping. It's recommended that it's removed as soon as you install as it becomes harder to remove with time.

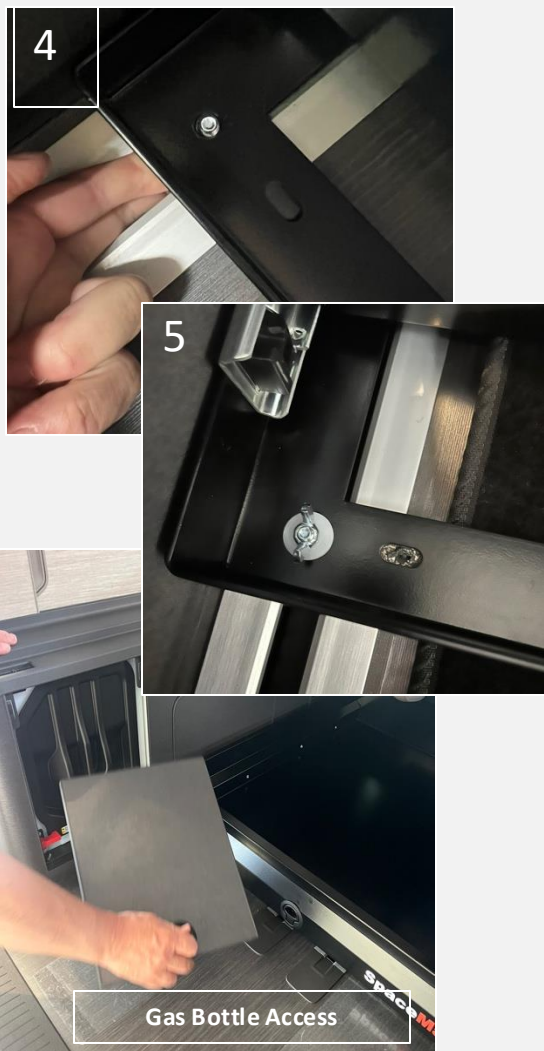

Safety and Correct Use:

- **Maximum load capacity: 100kg.** Do not exceed this limit.
- Ensure all items are secured in the SpaceMate before driving to prevent movement.
- Always operate the SpaceMate on level ground.
- Do not ride, sit, or stand on the drawer.
- Do not allow children to operate or play on the SpaceMate.
- Install only on the VW California rail system. The product is not compatible with other vehicles.
- Ensure all fittings are securely tightened before use. Check periodically and re-tighten if necessary.
- When accessing or changing gas bottles follow manufacturers instructions for gas installation and use.
- Use only as intended.
- Misuse may result in damage, personal injury, or voiding of warranty.

