

Installation guide

Packing bags

-

VW T5 / T6 / T6.1

Multivan

California Beach

Caravelle

Watch the video:


<https://www.youtube.com/watch?v=sqwoeSTfE5M>



Take notice of the correct side: the VanEssa logo shows towards the boot (pic. 1).

Tip:
In order to avoid moisture behind the bags, take them out from time to time and let them dry during the day.

Multivan/Caravelle:
with sun blinds (from downwards)

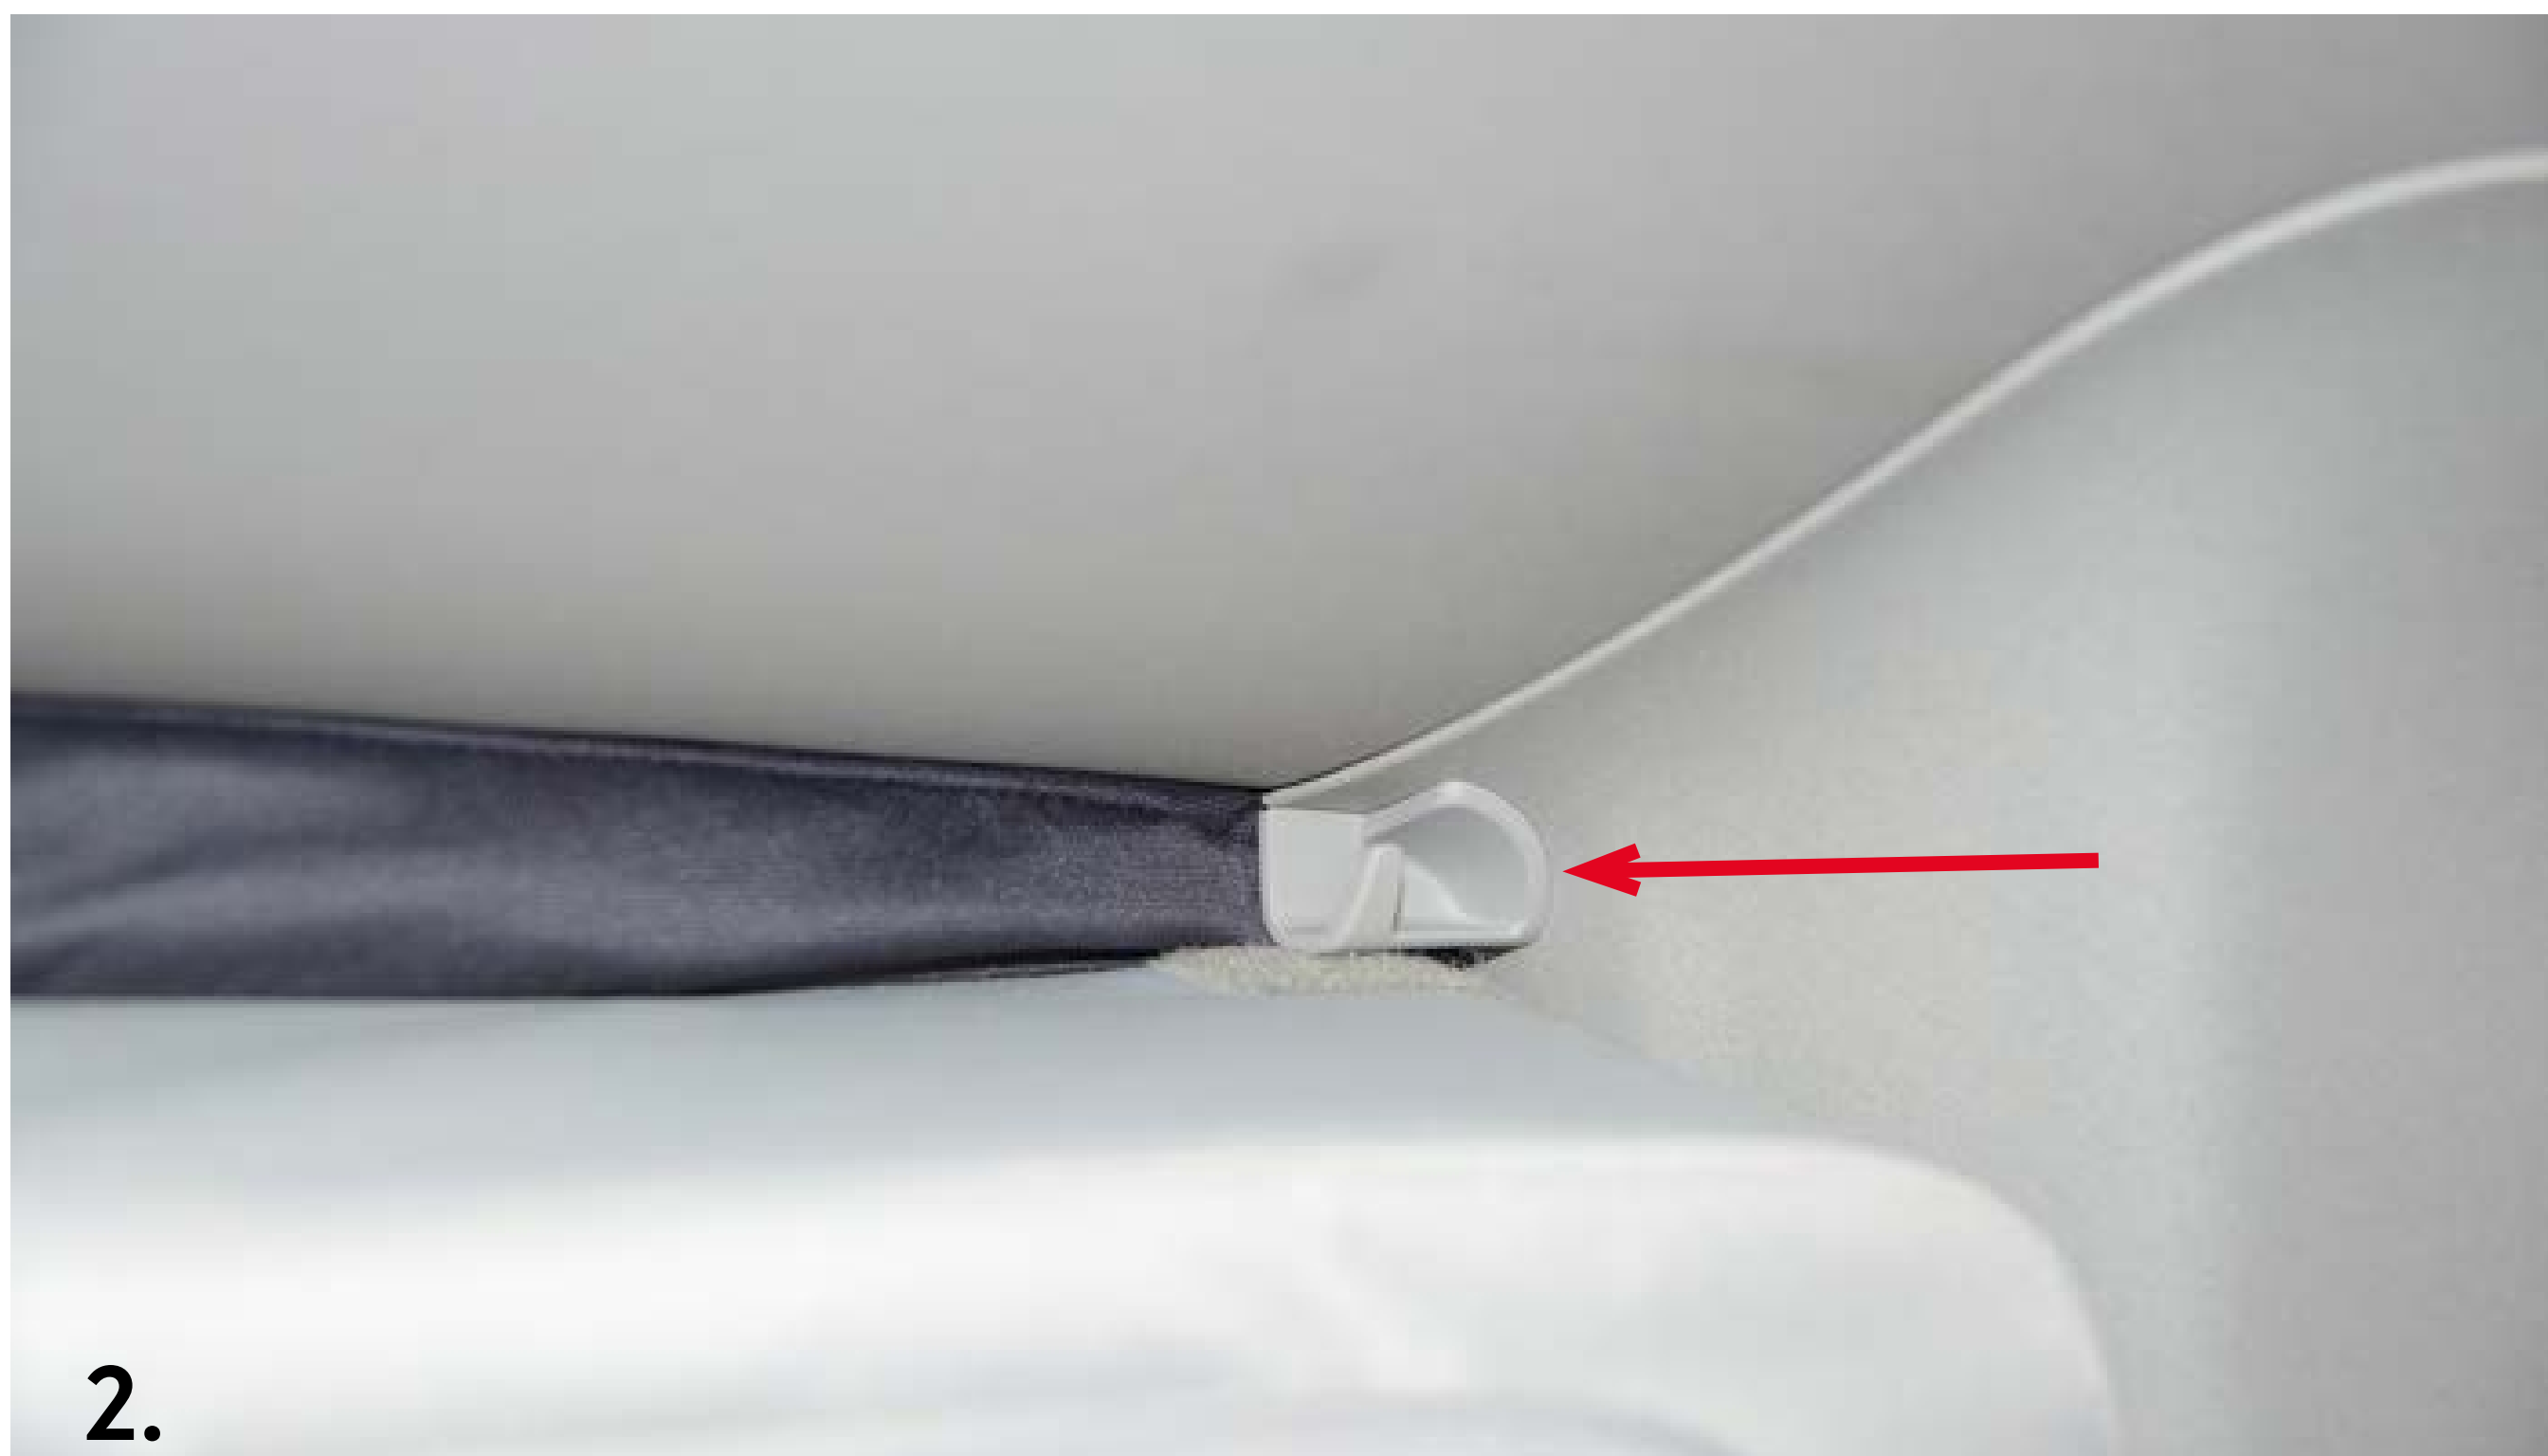

Remove the two foam chunks from the top of the packing bags.

Push the rear panel of the packing bags behind the sun blind hooks (pic. 2).

Then push the bags below into the window.

California Beach (from facelift 2010): with sun blinds (from above)



Push the rear panel of the packing bag with the two foam chunks on top behind the sun blinds (pic. 3).

Then push the bags below into the window (pic. 4).

Multivan (Startline)/Caravelle: without sun blinds but with lining



Instead of the „missing“ front sun blind hook, plug the Z-angles between lining and window (pic. 5).

Note:

If the Z-angles (due to tolerances in the distance between window and lining) can be inserted too loosely and do not hold on their own, stick the fleece tapes onto the angles.

Then thread the rear panel of the packing bags behind the Z-angles (pic. 5) and the sun blind hook (pic. 6) and push the bags into the window slot.

If you have any further questions please contact us:
+49 (0) 8063 / 20 760 - 0 oder info@vanessa-mobilcamping.de

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Deutschland
Tel. +49 (0) 8063/20 760-0 | info@vanessa-mobilcamping.de