


Installation of the Ocean/Coast rear slide-out

The assembly is very easy.

The slide-out is delivered fully assembled, all you have to do is insert the locks into the already assembled spacer blocks. Just follow the instructions in the picture.

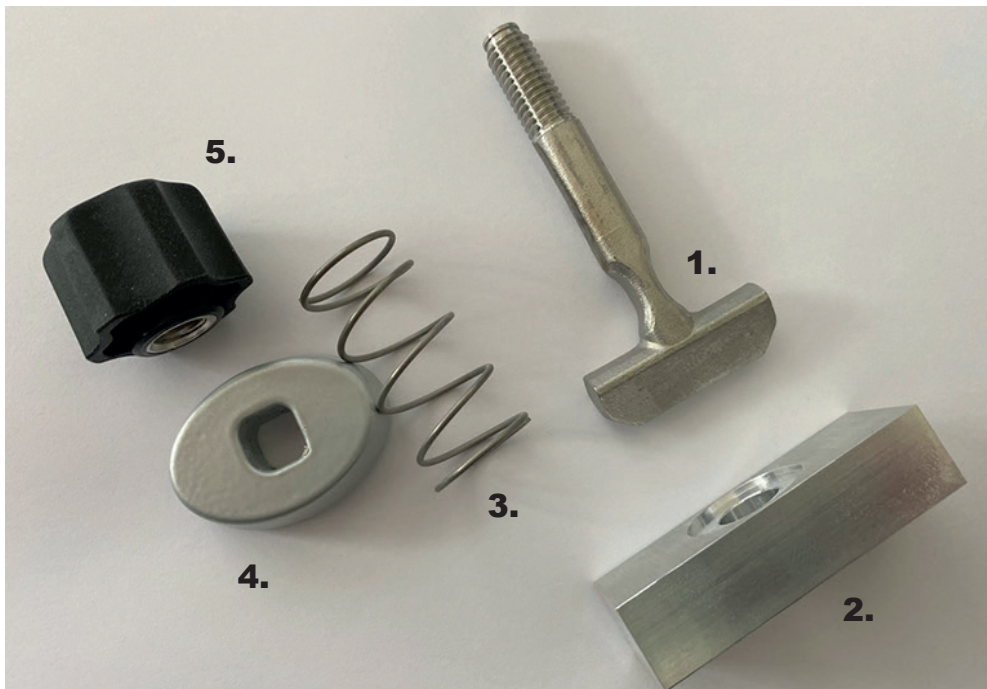

- 1. Locking**
- 2. Distance block
(already mounted
on the slide-out)**
- 3. Spring**
- 4. Washer**
- 5. Grip/Handle**

a.) Put the rear slide-out in your trunk.

b.) Insert the two locks supplied in the small box **1.** from below through the already installed **2.** distance blocks (in the rear area of the rear extension)

c.) First assemble the **3.** spring, then put the **4.** washer on the shaft of the lock and turn the **4.** grip/handle loosely onto the thread.



It should look like this now.

If you have now positioned the slide-out correctly, the locks are above the rails. Press the locks down and turn the washer by 90 degrees. Tighten the grip/handle and test the pull-out for a firm hold.

Please re-tighten it after a few kilometres drive.

If you have any questions about assembly, please contact us at +49 81 66-69 49 818. We hope you enjoy your new slide-out. Please note that the slide-out should not be loaded with more than 150 kg (evenly distributed).