



Wardrobe shelves for the VW California Ocean and Coast T6.1

Installation instructions

Introduction

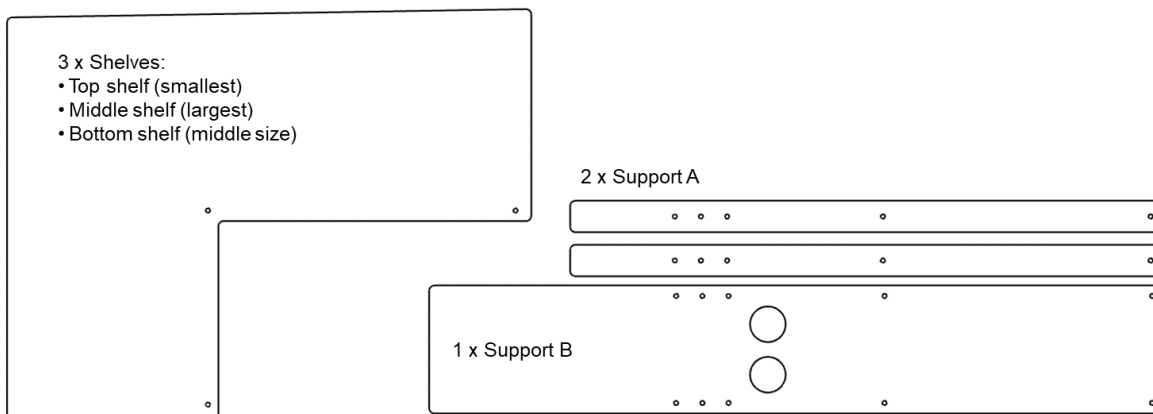
These wardrobe shelves have been specifically designed to be installed without the need for any permanent alterations to your VW California, the process should take approximately 10 minutes.






If you selected the version for wardrobes with a safe then you will notice that the part 'B' which you receive is shorter than shown in these instructions and you will only have 2 shelves. Apart from these two minor differences the versions with, and without the safe are the same and these instructions are applicable to both variants.

All two shelf options are supplied with only a top and middle shelf (the bottom shelf is omitted), and the appropriate number of bolts, spacers and bungees.

These shelves are compatible with the VW California T6.1, specifically the model which has the new style solid panel sliding door. Another earlier version of these wardrobe shelves is available if you have the VW California SE or Ocean 6.0 with the wrap around rolling door.

Components



ID	Part	Description	QTY
D	M5 x 12mm shelf support bolt		12
E	10mm x 11mm shelf spacer		12
F	M4 x 8 mm bungee bolt		9
G	M10 Bunge support post		9
H	4mm bungee cord		3

Installation steps

1. Parts A and B have multiple threaded holes to take the shelf support bolts, the height of the top and middle shelves are fixed, the bottom shelf has the option of 3 heights. Assemble the shelf support pegs by sliding one of the shelf support bolts (D) into plastic shelf support spacer (E) and screw into one of the threaded holes in part A and B. Tighten until the bolt is fully inserted into the aluminium plate; so that the tip of the bolt is flush with the rear of the shelf support. This can usually be achieved by hand tightening only, an Allen key can be used but take care not to allow the bolt tip to protrude beyond the back surface of the shelf supports which could prevent parts A and B from sitting flat on the internal surfaces of the wardrobe. Repeat until you have filled 12 threaded holes; all of the 4 top and 4 middle shelf holes and one set of the three lower holes.
2. Peel back the self adhesive backing paper from shelf supports A and place them on the rear wall of the wardrobe, one close to the sliding window blind and the other close to the wardrobe door as shown in Figure 1. The exact horizontal position is not critical, as long as they are well separated from each other, aligned vertically, and resting on the base of the wardrobe.
3. Fix part B with the self adhesive tape to the inside of the wardrobe which is against the fridge, position the front edge of part B against the lower door hinge and ensure the base of part B rests on the base of the wardrobe as shown in Figure 2.



Figure 1, Position of parts A.



Figure 2, Position of part B.

4. The three shelves are different widths to accommodate the tapered sides of the van. Place the shelves into the wardrobe starting from the bottom shelf and working upwards.
5. Parts G and H come pre-assembled as a set of three posts and one bungee cord per shelf. The bungee cord has already been threaded through the posts and tied at the correct length.
6. Insert one bungee bolt F through the shelf from below and thread it into the base of one of the bungee support posts until tight. Repeat this for the middle and last post. For the last post on each

shelf you will stretch the bungee cord (to apply tension in the cord), take care to keep the bungee post vertical and parallel to the bolt as you thread it in.



Figure 3. Bungee support posts and bungee cord placement

Installation complete.

We hope you enjoy your new wardrobe shelves for a long time. If you encounter any difficulties please do not hesitate to contact us for advice and support:

On our web page:

www.YesCampervan.co.uk

by e-mail:

joe@YesCampervan.co.uk

On Instagram and Facebook:

<https://www.instagram.com/yescampervan/>

<https://www.facebook.com/Yes-Campervan-106344454480912>

Positive posts, likes and shares are always appreciated on our social media pages.